

User Manual



Spirit (Plus) 2KVA-5KVA
INVERTER / CHARGER

Table Of Contents

ABOUT THIS MANUAL.....	1
Purpose.....	1
Scope.....	1
SAFETY INSTRUCTIONS	1
INTRODUCTION.....	2
Features.....	2
Basic System Architecture	2
Product Overview	3
INSTALLATION.....	4
Unpacking and Inspection	4
Mounting the Unit	4
Battery Connection.....	5
AC input/output Connection	7
PV Connection	9
Final Assembly	11
OPERATION.....	11
Power ON/OFF.....	11
Operation and Display Panel	12
LCD Display Icons.....	13
LCD Setting.....	15
Display Setting	20
Operating Mode Description	21
Alarm Behavior Table	22
SPECIFICATIONS.....	24
Table 1 Line Mode Specifications	24
Table 2 Inverter Mode Specifications.....	25
Table 3 Charge Mode Specifications	26
Table 4 General Specifications	27
Troubleshooting.....	28

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION**—To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries.
3. Do not try to repair or open the unit. Take it to a qualified service center when needed .Incorrect installation may result in a risk of electric shock or fire.
4. Disconnect all wirings before attempting any maintenance or cleaning.
5. **CAUTION** - Only qualified personnel can install and troubleshoot this inverter.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this hybrid inverter, please follow required spec to select appropriate cable size. It's very important to correctly operate this hybrid inverter.
8. Be very cautious when working with metal wrist watch and tools on or around batteries. A potential risk exists for short circuit batteries terminals with explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC connectors.
10. This hybrid inverter should be connected to a permanent grounded wiring system.

INTRODUCTION

This is a pure sine wave stand-alone hybrid inverter system combining the function of inverter, AC charger and optional solar charger, and provides a long run-time uninterruptible power supply. Its comprehensive LCD display provides system status, and user-friendly panel eases parameters settings.

Features

- High-frequency switching technology, compact size and light weight
- Pure sine wave output for wide range of applications
- Build-in solar charger controller with MPPT technology to optimize the power utilization (some models don't have this option)
- Efficient DC-to-AC conversion minimizing energy loss
- Standby Charging Mode enables battery charging even when the unit is switched off
- Intelligent cooling fan control
- Input/ output isolated design for the maximum operation safety
- LCD displays for detailed status
- Configurable AC input voltage range and priority for AC or PV input
- Supports Home Appliances / Office Equipment/ Lighting Equipment/ Motor-based Equipment (such as Fan, Air-Conditioner, Washing Machines etc)
- Input low voltage / Overload / Short circuit / Low battery alarm / Input over voltage / Over temperature protections.
- Supports both rack and wall-mount installation

Basic System Architecture

The following illustration shows basic application for this hybrid inverter. It also includes following devices to have a complete running system:

• Generator or Utility.

• PV modules

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.



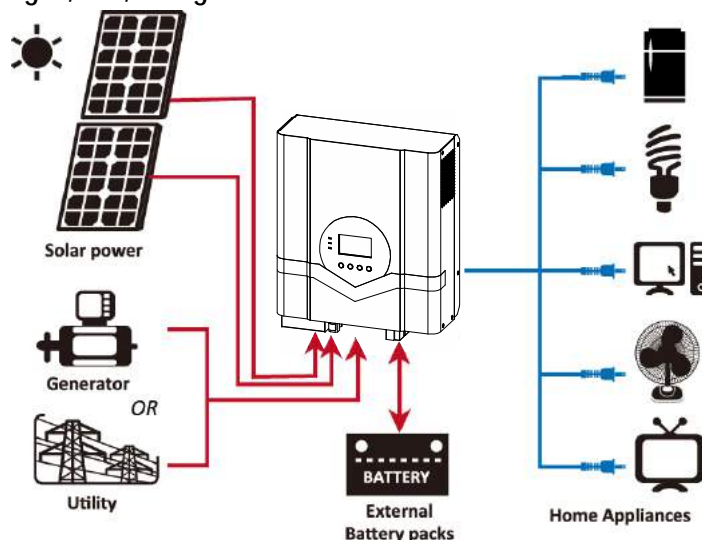


Figure 1 Hybrid Power System

Product Overview

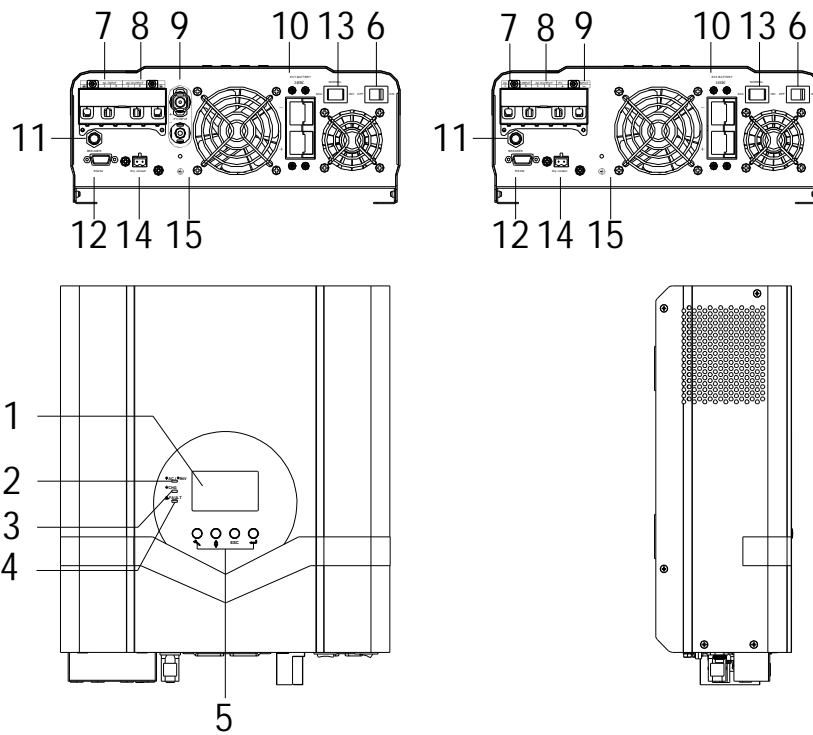

2KVA / 3KVA

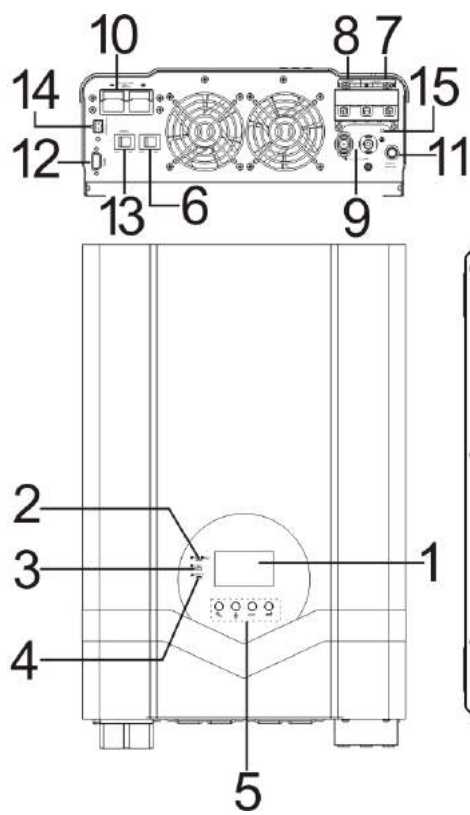

5KVA

1. LCD display
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function buttons
6. Power on/off switch
7. AC input
8. AC output
9. PV input
10. Battery input
11. AC Fuse/Breaker
12. RS232 communication port
13. Maintenance switch
14. Dry contact
15. Ground screw

INSTALLATION

Unpacking and Inspection


Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside the box:

- The unit x 1
- User manual x 1
- Ring terminal x 1
- Strain relief plate x 2
- Terminal cover x 1
- Screws x 4

Mounting the Unit


Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- The ambient temperature should be between 0°C and 45°C to ensure optimal operation,
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

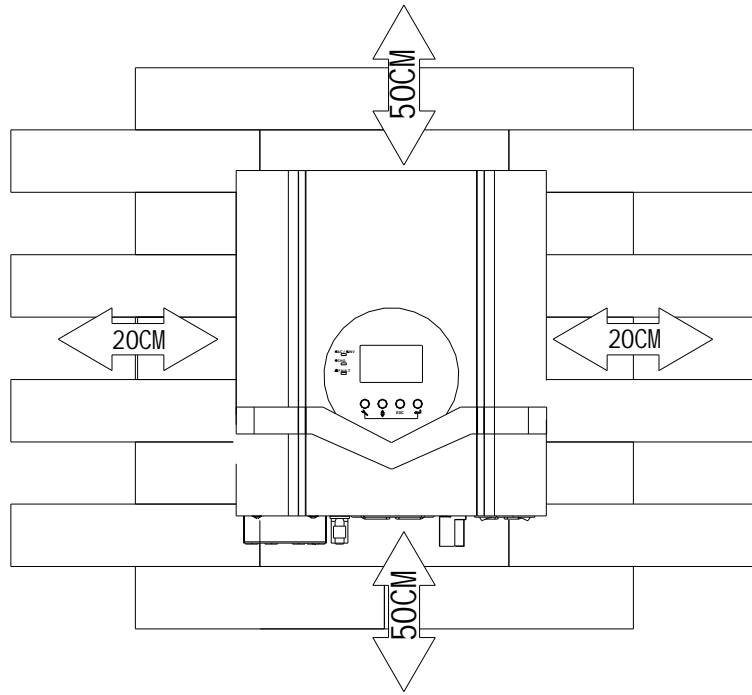

! SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

Install the unit by screwing two screws. It's recommended to use M4 or M5 screws.

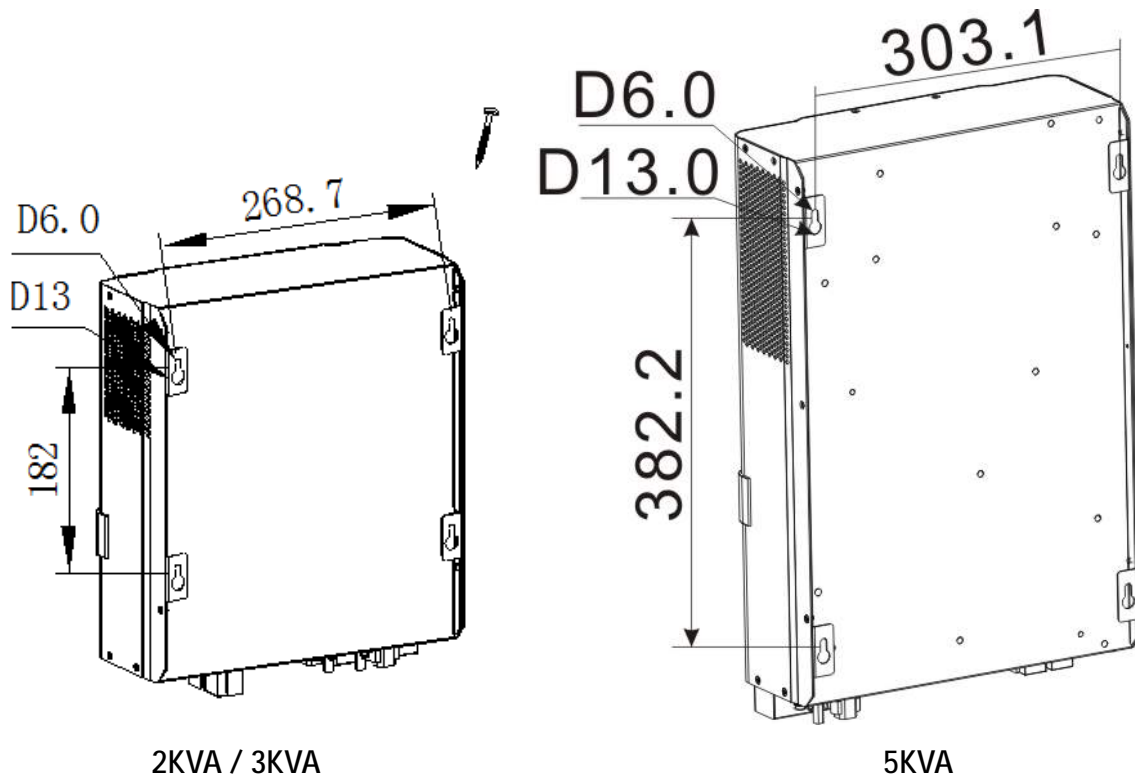

2KVA / 3KVA

5KVA

Battery Connection

CAUTION: For safety operation and regulation compliance; it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! All wiring must be performed by qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for


battery connection. To reduce risk of injury, please use recommended cable as below.

Recommended battery cable size:


Model	Terminal Type	Remove Sleeve Length	Wire Size	DC Cable (mm2)
2/3KVA-24V	Type A	22mm	2 x 6AWG	26
5KVA-48V	Type A	22mm	2 x 6AWG	26

Please follow below steps to implement battery connection:


1. Remove insulation sleeve for positive and negative conductors, refer to the appropriate sleeve length in the table.
2. Put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.

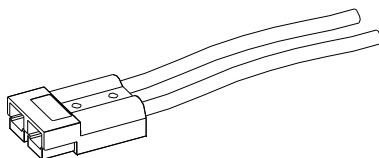


3. Connect all battery packs as below chart.

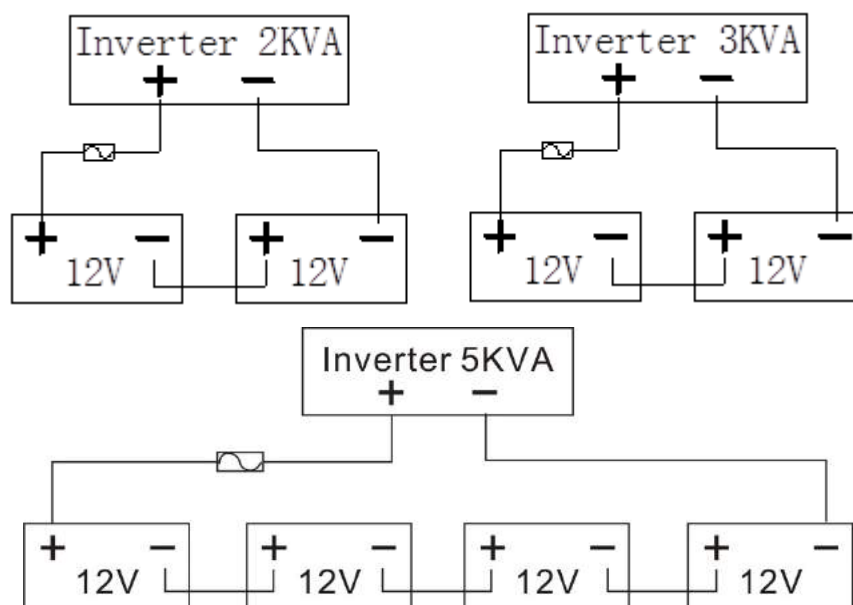

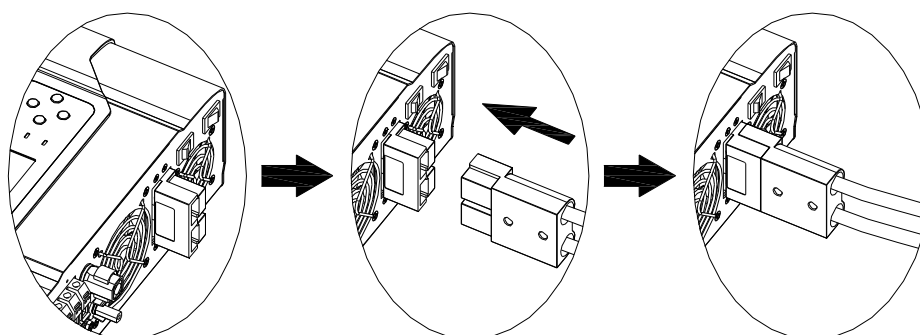

4. Insert the battery wires terminal into battery connectors of inverter. Make sure polarity at both the battery and the inverter/charge is correctly connected.

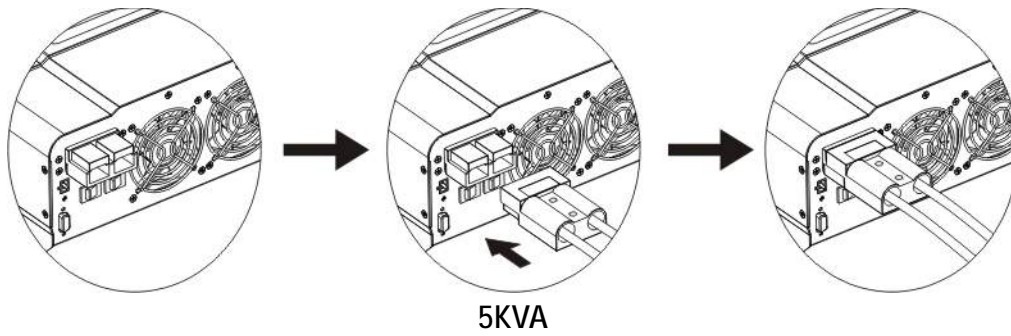

2KVA / 3KVA



 **WARNING: Shock Hazard**
Installation must be performed with care due to high battery voltage in series.

 **CAUTION!!** Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-) terminal.

AC input/output Connection

CAUTION!! Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 25A for 2KVA, 32A for 3KVA and 40A for 5KVA.

CAUTION!! Terminal blocks are with "AC INPUT" and "AC OUTPUT" marking always check labels to avoid wrong connection.

WARNING! All wiring must be performed by qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. Always use recommended AC cable size as below.

Suggested cable requirement for AC wires

Model	Wire Size	Cable (mm ²)	Torque value
2/3KVA	12AWG	4	1.2 Nm
5KVA	10AWG	6	1.6 Nm


Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnector first.
2. Remove insulation sleeve 8mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Fix strain relief plate
4. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⊕) first.


⊕ → Ground (yellow-green)

L → LINE (brown or black)

N → Neutral (blue)

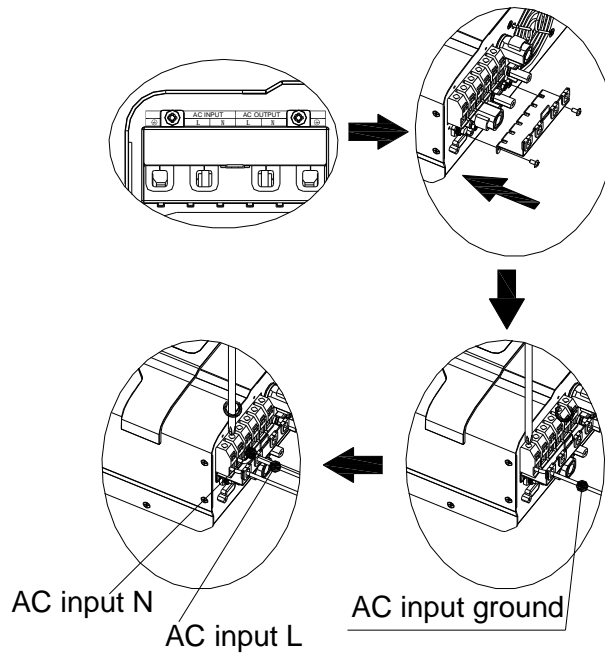

2KVA / 3KVA


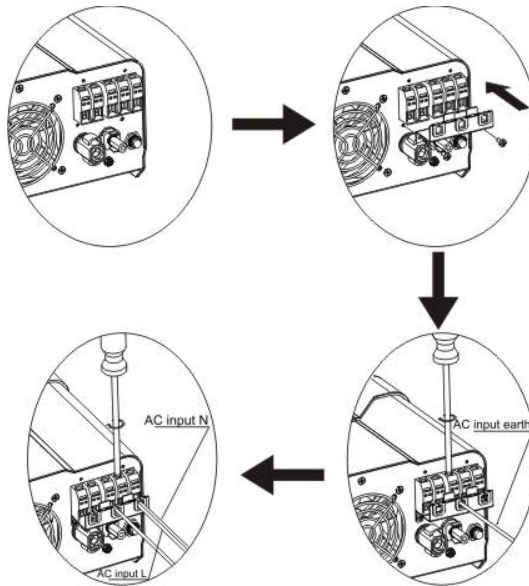


5KVA



WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit

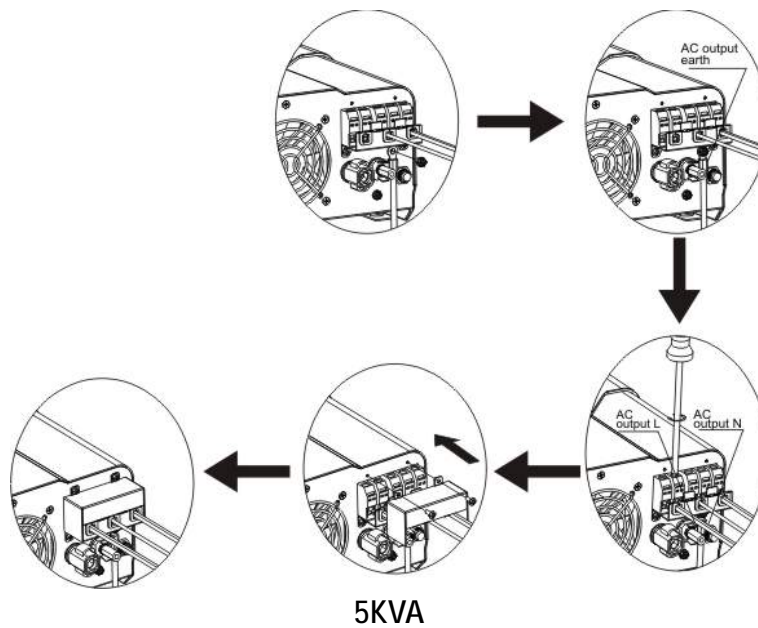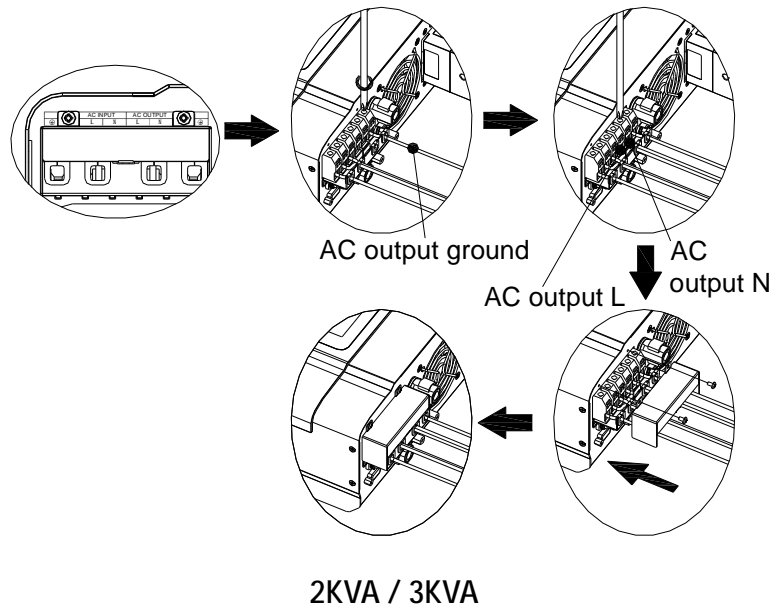

5. Make sure the wires are securely connected and the cover is fixed by screw.

PV Connection

CAUTION: Before connecting to PV modules, please install separately a DC circuit breaker between inverter and PV modules.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

PV Module Selection: (Only for the model with MPPT solar charger)

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

INVERTER MODEL	2KVA / 3KVA
Max. PV Array Open Circuit Voltage	75Vdc
PV Array MPPT Voltage Range	30~75Vdc

Take 250Wp PV module as an example. After considering above two parameters, the recommended module configurations for 3KVA are listed as below table.

Maximum Power (Pmax)	250W	2KVA / 3KVA; 2 pieces in serial and 2 sets in parallel.
Max. Power Voltage Vmpp(V)	30.1V	
Max. Power Current Impp(A)	8.3A	
Open Circuit Voltage Voc(V)	37.7V	
Short Circuit Current Isc(A)	8.4A	

Maximum PV module numbers in Series: 2

PV module numbers in Parallel: 2

Total PV module numbers: $2 \times 2 = 4$

PV Module Selection: (Only for the model with MPPT solar charger)

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min, battery voltage.

INVERTER MODEL	5KVA
Max. PV Array Open Circuit Voltage	150Vdc
PV Array MPPT Voltage Range	60~150Vdc


Take 250Wp PV module as an example. After considering above two parameters, the recommended module configurations for 5KVA are listed as below table.

Maximum Power (Pmax)	250W	5KVA: 2 pieces in serial and 8 sets in parallel, or 4 pieces in serial and 4 sets in parallel
Max. Power Voltage Vmpp(V)	30.1V	
Max. Power Current Impp(A)	8.3A	
Open Circuit Voltage Voc(V)	37.7V	
Short Circuit Current Isc(A)	8.4A	

PV Module Wire Connection

Please follow below steps to implement PV module connection:

1. Wire connection of the connector:

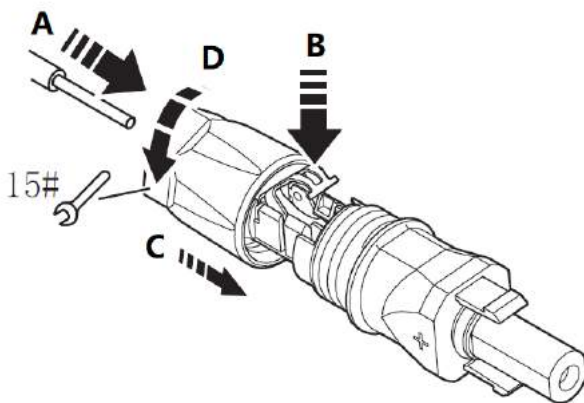

A. Insert the stripped conductor.


Cross-sections: 2.5 to 62 mm. Outside diameter: 5.0 to 8.0 mm. Stripping length: 15 mm.

B. Close spring with the thumb or using combination pliers. Please ensure that the spring is closed. (see Fig.)

C. Push connectors together (see Fig.)


D. Screw cable gland tight. Screw in the nut until it reaches the O-ring and then tighten it with at least 2 Nm using a suitable tool. Finished!

2. Check correct polarity of wire connection from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector.

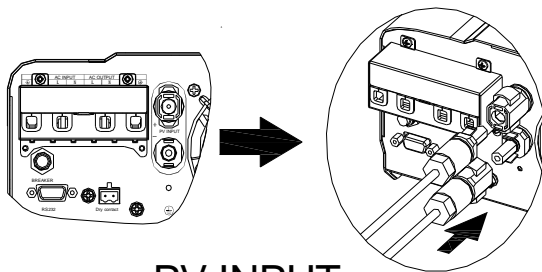


PV INPUT

2KVA / 3KVA

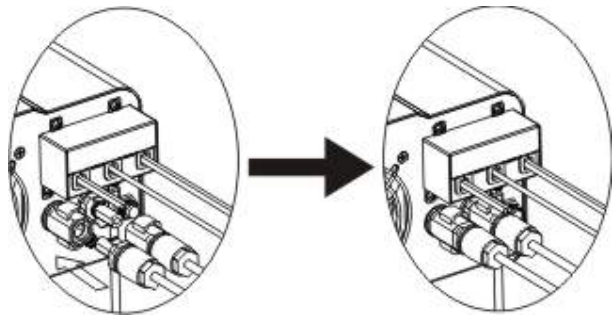

5KVA

3. If you need disconnect the PV connector, follow below steps and refer to the below Fig.

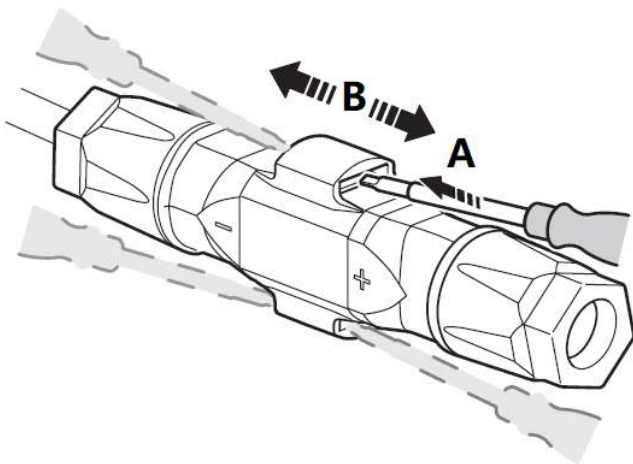

A. Insert screwdriver SZF1 or phase tester in one of the illustrated positions.


B. Leave screw driver inserted and remove connector from socket.

Final Assembly


After connecting all wirings, before turning on the unit, please check the position of maintenance switch. Put the switch to "NORMAL" position if not. Other position of the switch like "INV" or "SCC" is used for only service purpose.

OPERATION

Power ON/OFF

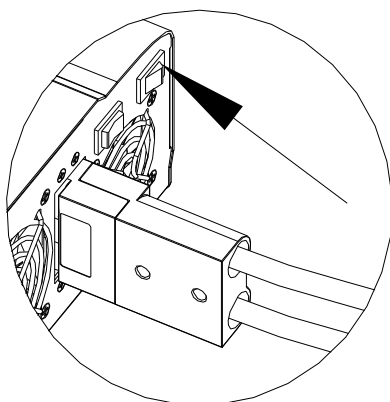

2KVA / 3KVA

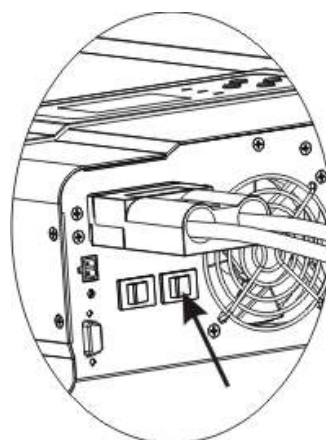


5KVA

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

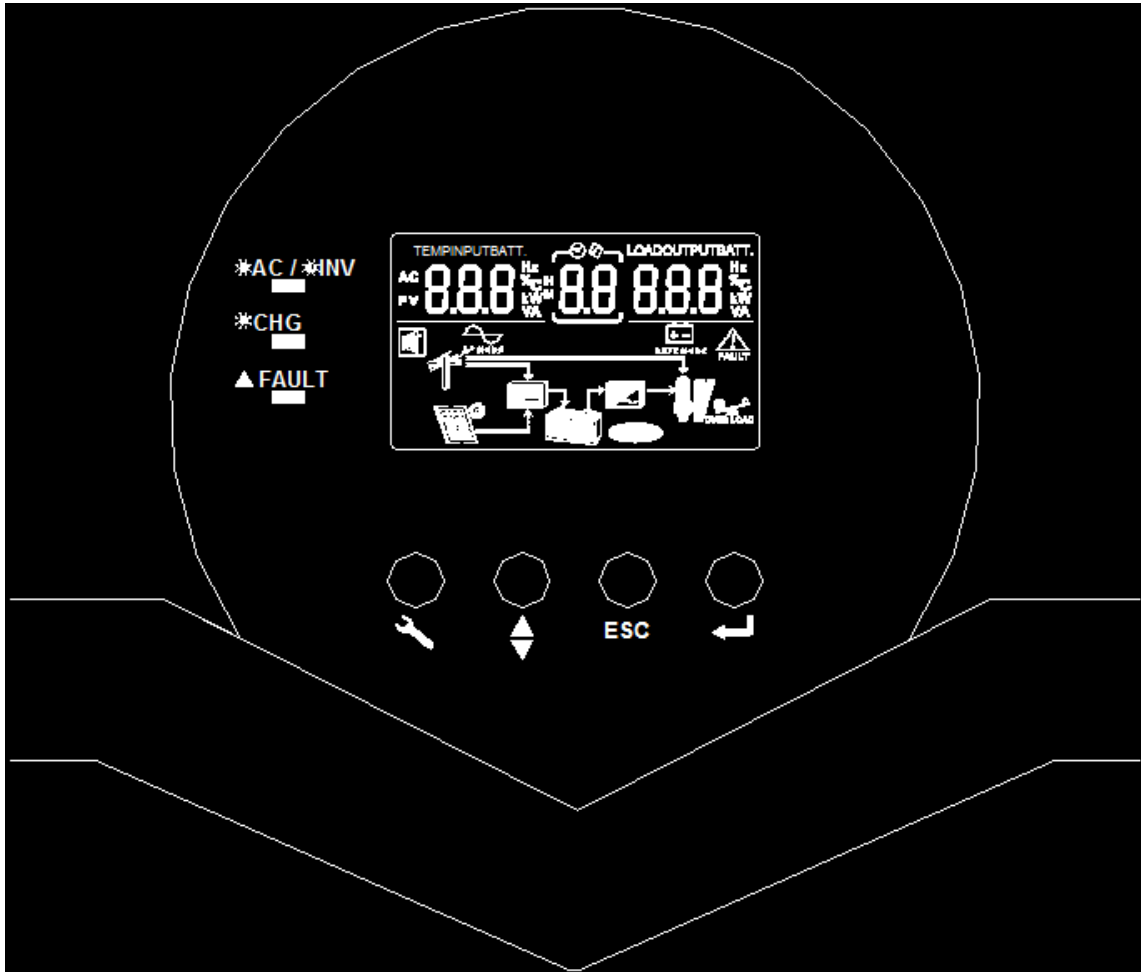


LED Indicator


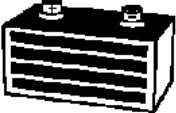
LED Indicator		Messages	
*AC / *INV	Green	Solid On	Output is powered by utility in line mode.
		Flashing	Output is powered by battery or PV in battery mode.
*CHG	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
▲ FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

Button function

Button	Function	Description
	Configuration	Enter configuration mode, and switch between setting menus
	Up/down	Move to previous/next setting option
	ESC	Return to main menu
	Enter	Confirm setting

LCD Display Icons

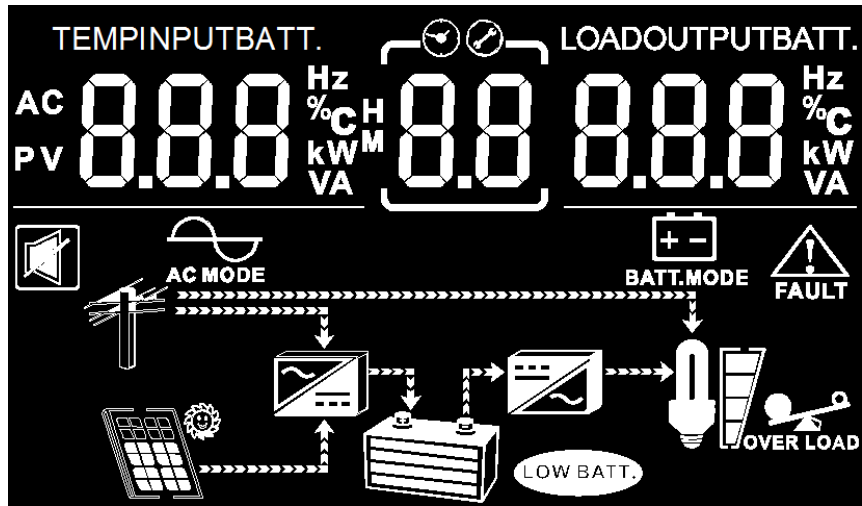









Icon	Function description
Input Source Information	
AC	Indicates the AC input.
PV	Indicates the PV input
INPUTBATT. 8.8.8 Hz %C kW VA	Indicate input voltage, input frequency, PV voltage, charger current (if PV in charging for 3K models), charger power (only for MPPT models), battery voltage.
Configuration Program and Fault Information	
8.8	Indicates the setting programs.
8.8 	Indicates the warning and fault codes.
Output Information	
LOADOUTPUTBATT. 8.8.8 Hz %C kW VA	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.
Battery Information	
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.


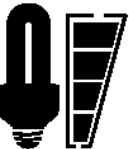
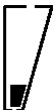



In AC mode, it will present battery charging status.








Status	Battery voltage	LCD Display
Constant Current mode / Constant Voltage mode	<2V/cell	4 Bars will flash in turns.
	2 ~ 2.083V/cell	Bottom bar will be on and the other three bars will flash in turns.
	2,083 ~ 2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.
	>2.167V/cell	Bottom three bars will be on and the top bar will flash.
Floating mode. Batteries are fully charged.		4 bars will be on.

In battery mode, it will present battery capacity.

Load Percentage	Battery Voltage	LCD Display
Load >50%	< 1.85V/cell	
	1.85V/CCII ~ 1.933V/cell	
	1.933V/cell ~ 2.017V/cell	
	> 2.017V/cell	
Load < 50%	< 1.892V/cell	
	1.892V/cell ~ 1.975V/cell	
	1.975V/cell ~ 2.058V/cell	
	>2.058V/cell	

Load Information



 OVER LOAD	Indicates overload.			
	Indicates the load level by 0-24%, 25-50%, 50-74% and 75-100%.			
	0%~25%	25%~50%	50%~75%	75%~100%
				





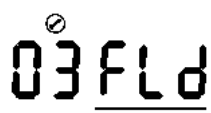

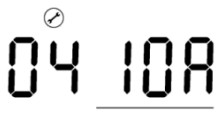
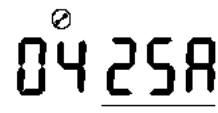






Mode Operation Information	
	Indicates unit connects to the mains.
	Indicates unit connects to the PV panel.
	Indicates load is supplied by utility power.
	Indicates load is supplied by battery power or pv power.
	Indicates the utility charger circuit is working.
	Indicates the DC/AC inverter circuit is working.
Mute Operation	
	Indicates unit alarm is disabled.

LCD Setting

After pressing and holding “Configuration” button for 1 second, the unit will enter setting mode and switch between different setting items. Press “Up/down” button to switch between different setting parameters. And then, press “ENTER” button to confirm the selection or ESC button to exit.

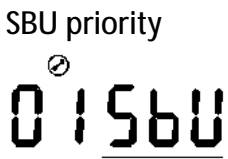Setting Programs:



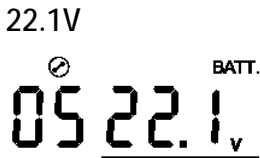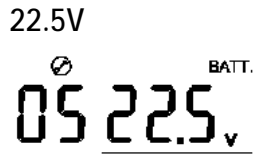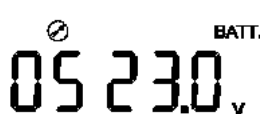


Program	Description	Selectable option	
01	Output source priority: To configure load power source priority	Solar first 	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power the loads at the same time. Utility provides power to the loads only when any one condition happens: -Solar energy is not available -Battery voltage drops to low-level warning voltage or the setting point in program 05.
		Utility first (default) 	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.

		SBU priority 	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 05.
02	AC input voltage range	Appliances (default) 	If selected, acceptable AC input voltage range will be within 90-280VAC
		UPS 	If selected, acceptable AC input voltage range will be within 170-280VAC
03	Battery type	AGM (default) 	Flooded 
		User-Defined 	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 9, 10 and 11.
04	Maximum utility charging current	Available options in 2KVA / 3KVA model:	
		10A 	25A(default) 
		Available options in 5KVA model:	
			
05	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.	Available options in 2KVA / 3KVA model:	
		22.1V 	22.5V 
		23.0V 	23.4V 

		23.8V ⊗ BATT. 05 23.8 _v	24.3V ⊗ BATT. 05 24.3 _v
		24.7V ⊗ BATT. 05 24.7 _v	25.1V ⊗ BATT. 05 25.1 _v
		Available options in 5KVA model:	
		44.2V ⊗ BATT. 05 44.2 _v	45.0V ⊗ BATT. 05 45.1 _v
		46.0V ⊗ BATT. 05 46.0 _v	46.8V ⊗ BATT. 05 46.8 _v
		47.6V ⊗ BATT. 05 47.7 _v	48.6V ⊗ BATT. 05 48.6 _v
		49.4V ⊗ BATT. 05 49.5 _v	50.3V ⊗ BATT. 05 50.3 _v
06	Setting voltage point back to battery mode when selecting "SBU priority" or "Solar first" in program 01.	Available options In 2KVA / 3KVA model:	
		Battery fully charged ⊗ BATT. 06 FUL	24.6V ⊗ BATT. 06 24.6 _v
		25.0V ⊗ BATT. 06 25.0 _v	25.4V ⊗ BATT. 06 25.4 _v
		25.8V ⊗ BATT. 06 25.8 _v	26.3V ⊗ BATT. 06 26.3 _v
		26.7V ⊗ BATT. 06 26.7 _v	27.2V ⊗ BATT. 06 27.2 _v
		27.6V ⊗ BATT. 06 27.6 _v	28.0V ⊗ BATT. 06 28.0 _v





		28.5V ⊗ 06 28.5 _v BATT.	28.9V ⊗ 06 28.9 _v BATT.
		Available options In 5KVA model:	
		Battery fully charged ⊗ 06 FUL BATT.	49.2V ⊗ 06 49.2 _v BATT.
		50.0V ⊗ 06 50.0 _v BATT.	50.8V ⊗ 06 50.9 _v BATT.
		51.6V ⊗ 06 51.8 _v BATT.	52.6V ⊗ 06 52.6 _v BATT.
		53.5V ⊗ 06 53.5 _v BATT.	54.4V ⊗ 06 54.4 _v BATT.
		55.2V ⊗ 06 55.2 _v BATT.	56.0V ⊗ 06 56.1 _v BATT.
		57.0V ⊗ 06 57.0 _v BATT.	57.8V ⊗ 06 57.8 _v BATT.
07	Charger source priority: To configure charger source priority	If this hybrid inverter is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first ⊗ 07 C50	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Utility first ⊗ 07 CUL	Utility will charge battery as first priority. Solar energy will charge battery only when utility power is not available.
		Solar and Utility (default) ⊗ 07 SNU	Solar energy and utility will charge battery at the same time.
		Only Solar ⊗ 07 050	Solar energy will be the only charger source no matter utility is available or not.

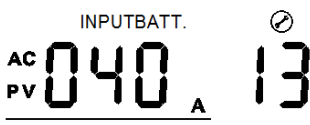		If this hybrid inverter is working in Battery mode only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.	
08	Alarm control	Alarm on (default) 08 600	Alarm off 08 60F
09	Bulk charging voltage (C.V voltage)	3KVA setting: 28.2V CU 09 28.2 _v ^{BATT.}	
		If self-defined is selected in program 3, this program can be set up. Setting range is from 25.0V to 32.0V for 3KVA model. Increment of each dick is about 0.1V.	
		5KVA setting: CSU 09 58.7 _v ^{BATT.}	
10	Floating charging voltage	3KVA setting: 27.0V FLU 10 27.0 _v ^{BATT.}	
		If self-defined is selected in program 3, this program can be set up. Setting range is from 25.0V to 32.0V for 3KVA. Increment of each dick is about 0.1V.	
		5KVA setting: 55.0V FLU 10 55.0 _v ^{BATT.}	
11	Low DC cut-off voltage	3KVA default setting: 20.0V COU 11 20.0 _v ^{BATT.}	
		If self-defined is selected in program 3, this program can be set up. Setting range is from 20.0V to 24.0V for 3KVA model. Increment of each dick is about 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.	
		5KVA default setting: 40.0V EOd 11 39.9 _v ^{BATT.}	
		If self-defined is selected in program 3, this program can be set up. Setting range is from 40.0V to 48.0V for 5KVA model. Increment of each dick is about 0.2V. Low DC cut-off voltage will be fixed to	

		setting value no matter what percentage of load is connected.	
12	Output frequency	50Hz(default) 	60Hz 
13	Maximum charging current: To configure total charging current for solar and utility chargers.(Max. charging current = utility charging current + solar charging current)	40A (default) 	Setting range is from 10A to 120A. Increment of each click is 10A.
14	Output mode when in stand- by mode(Switch off)		
		<p>When set on, the inverter will have AC output in stand-by mode (switch off) if utility is available.</p> <p>When set off, the inverter will have no output in stand-by mode (switch off) even if utility is available.</p>	






Display Setting




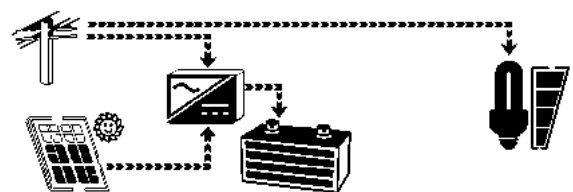
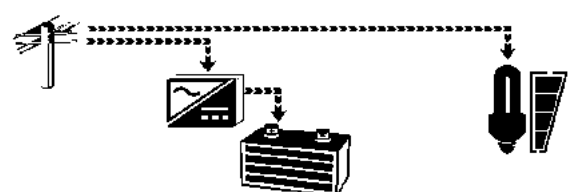
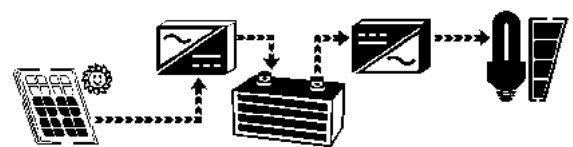
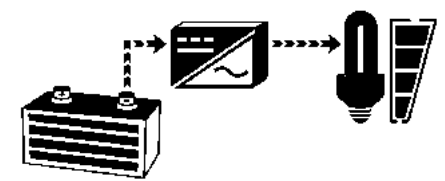
The LCD display information will be switched in turns by pressing “Up/down” key. The selectable numerical information is as: input voltage, input frequency, PV voltage, PV charging power, battery voltage, output voltage, output frequency, load in Watt, load in VA, rated Watt, rated VA, main CPU Version and second CPU Version.

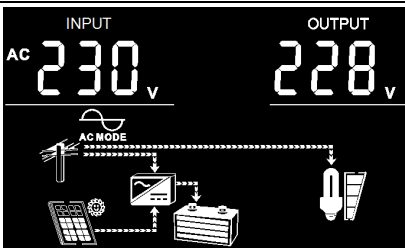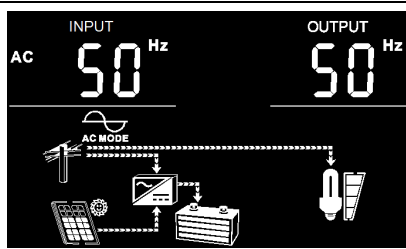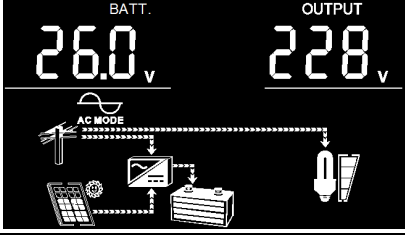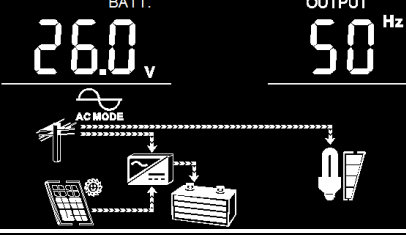LCD Display	Remark
<p>Note: The LCD display information will be switched in turns by pressing “UP” or “DOWN” button. The default page is ①, the display will show default page after pressing “ESC” button.</p>	
	①. AC input voltage / frequency & AC output voltage /frequency
	②. Battery voltage & AC output voltage / frequency
	③. Battery voltage & Load VA /WATT
	

		④.PV voltage / PV charging power & AC output voltage / frequency
		⑤.Inverter(U1) Rating power KW /Firmware version & Solar charging controller (U2)Rating power / Firmware version

Operating Mode Description

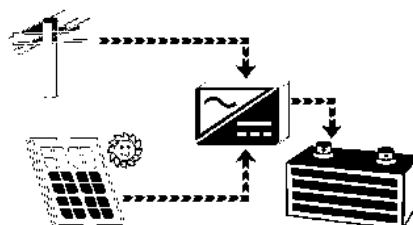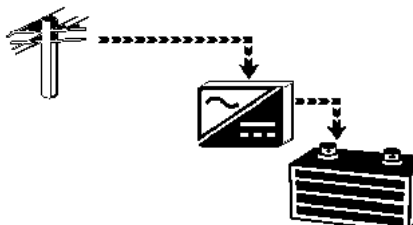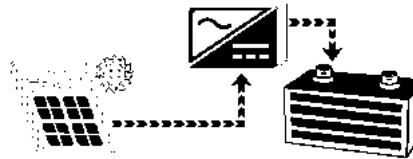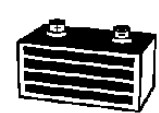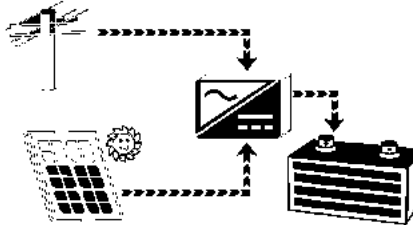Operation mode	Description	LCD display
<p>Standby mode Note: *Standby mode: The Inverter is not turned on yet but at this time, the inverter can charge battery without AC output</p>	<p>No output is supplied by the unit but it still can charge batteries.</p>	<p>Charging by utility and PV energy.</p>  <p>Charging by utility.</p>  <p>Charging by PV energy.</p>  <p>No charging.</p> 
<p>Fault mode Note: *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.</p>	<p>PV energy and utility can charge batteries.</p>	<p>Charging by utility and PV Energy</p>  <p>Charging by utility</p>

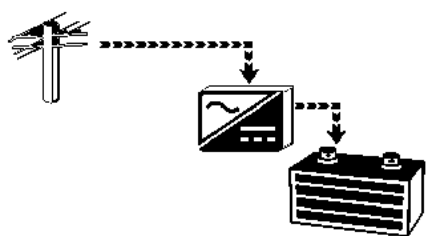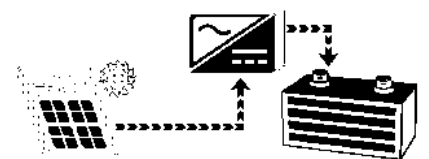		
		<p>Charging by PV energy</p> 
		<p>No charging</p> 
Line Mode	The unit will provide output power from the mains. It will also charge the battery at line mode.	<p>Charging by utility and PV energy.</p> 
		<p>Charging by utility.</p> 
Battery Mode	The unit will provide output power from battery and PV power.	<p>Power from battery and PV energy.</p> 
		<p>Power from battery only.</p> 

Alarm Behavior Table

Fault Code	Protect Function	Active Mode	Condition	Warning (O/P=ON)	Fault (O/P=OFF)	Restart	
						Operate	Condition
--	Low DC Voltage Alarm	Inv. mode	DC voltage < Low DC Alarm	1beep/2s	--	--	--
1	Over Charge Protection	Line mode	DC Voltage > High DC input Shut-down	Beep continuous	--	Manual	--

1	Over Voltage Protection	Standby	DC Voltage>High DC input Shut-down	--	Beep continuously	Auto	DC Voltage<High DC input Shut-down Recovery
2	Over Load Protection	Line/ Inv. mode	110%~150% load	1beep/0.5s , and continue for10s	Beep continuously	Manual	--
			>150% load	1beep/0.5s , and continue for 5s	Beep continuously	Manual	--
3	Output Short Circuit protection	Inv. mode	Output Voltage<20Vrms	--	Beep continuously	Manual	--
4	Inverter Fan Fault Protection	Line/ Inv. mode	Fan Locked Fan Defected	2beep/2s, and continue for 1min	Beep continuously	Manual	--
5	Inverter Over Temp Protection	Line/ Inv. mode	HEAT SINK over temp	--	Beep continuously	Auto	HEAT SINK Temp \leq 55 $^{\circ}$ C
6	Output Abnormal	Inv. mode	(Output Voltage <170Vrms and output current under 32Arms) or Output Voltage >280Vrms	--	Beep continuously	Manual	--
7	Bus Over Protection	Standby/ Line/ Inv. mode	Bus voltage over/ AC Input and output reconnect	--	Beep continuously	Manual	--
11	SCC charger Current Over FAULT	SCC	Scs charger current over 60A(3K) 80A(5K)	--	Beep 1time/2Second	Manual	--
12	SCC over temp.	SCC	SCC NTC Temperature over 85 $^{\circ}$ C	--	Beep 1time/2Second	Manual	--
13	SCC Output voltage	SCC	SCC Output voltage over 32V(3K)	--	Beep 1time/2Second	Manual/ Auto	SCC Output voltage low then 24V(3K)

	Over		60V(5k)				54V(5k)
14	SCC PV voltage Over	SCC	PV Input voltage over 75V(3K) 150V(5K)	--	Beep 1time/2Second	Manual/ Auto	PV Input voltage low then 65V(3K) 130V(5K)

Note: when SCC Fault, press ENTER Key will clear this fault message.

- 1) Unit will shut down after alarm for 1min, when unit on both fault mode and Switch-off mode. Unit will shut down immediately without any alarm, when unit on Switch-on mode with low DC input.

SPECIFICATIONS

MODEL	2000 Spirit 2K	3000 Spirit 3K	5000 Spirit 5K
Rating	2KW/2KVA-24VDC	3KW/3KVA-24VDC	5KW/5KVA-48VDC
MODEL	2001 Spirit Plus 2K	3001 Spirit Plus 3K	5001 Spirit Plus 5K
Rating	2KW/2KVA-24VDC + 40A MPPT SCC	3KW/3KVA-24VDC + 40A MPPT SCC	5KW/5KVA-48VDC + 80A MPPT SCC

Table 1 Line Mode Specifications

INPUT	2000 Spirit 2K	2001 Spirit Plus 2K	3000 Spirit 3K	3001 Spirit Plus 3K	5000 Spirit 5K	5001 Spirit Plus 5K
Input Voltage Waveform	Sinusoidal (utility or generator)					
Nominal Input Voltage	230Vac					
Low Loss Voltage	170Vac ± 7V(UPS) 90Vac ± 7V (Appliances)			175Vac ± 7V(UPS) 125Vac ± 7V (Appliances)		
Low Loss Return Voltage	180Vac ± 7V (UPS) 100Vac ± 7V (Appliances)			185Vac ± 7V (UPS) 135Vac ± 7V (Appliances)		
High Loss Voltage	280Vac ± 7V					
High Loss Return Voltage	270Vac ± 7V					
Max AC Input Voltage	300Vac					
Nominal Input Frequency	50Hz / 60Hz (Auto detection)					
Low Loss Frequency	40 ± 1Hz					
Low Loss Return Frequency	42 ± 1Hz					
High Loss Frequency	65 ± 1Hz					
High Loss Return Frequency	63 ± 1Hz					

OUTPUT	2000 Spirit 2K	2001 Spirit Plus 2K	3000 Spirit 3K	3001 Spirit Plus 3K	5000 Spirit 5K	5001 Spirit Plus 5K
Output Short Circuit Protection	Breaker					
Efficiency (Line Mode)	>95% (Rated R load, battery full charged)					
Transfer Time	10ms typical (UPS) 20ms typical (Appliances)					
Output power derating: When AC input voltage drops to 180V, the output power will be derated.	<p>The figure contains two graphs. The top graph is for 2KVA / 3KVA models. The y-axis is 'O/P Power' with markers for '50% power' and 'Rated power'. The x-axis is '280V AC I/P V' with markers for '90V', '180V', and '280V'. The power is zero until 90V, then rises to 50% power at 90V, continues to rise to 'Rated power' at 180V, remains constant until 280V, and then drops to zero. The bottom graph is for 5KVA models. The y-axis is 'O/P Power' with markers for '50% power' and 'Rated power'. The x-axis is '280V AC I/P V' with markers for '125V', '180V', and '280V'. The power is zero until 125V, then rises to 50% power at 125V, continues to rise to 'Rated power' at 180V, remains constant until 280V, and then drops to zero.</p>					


Table 2 Inverter Mode Specifications

INVERTER MODEL	2000 Spirit 2K	2001 Spirit Plus 2K	3000 Spirit 3K	3001 Spirit Plus 3K	5000 Spirit 5K	5001 Spirit Plus 5K
Rated Output Power	2KW/2KVA		3KW/3KVA		5KW/5KVA	
OUTPUT						
Output Voltage Waveform	Pure Sine Wave					
Output Voltage Regulation	230Vac±5%					
Output Frequency	50Hz					
Peak Efficiency	93%					
Overload Protection	5s@>150% load; 10s@110%~150% load					
Surge Capacity	2* rated power for 5 seconds					
Nominal DC Input Voltage	24Vdc				48Vdc	

INPUT		
Cold Start Voltage	23.0Vdc	46.0Vdc
Low DC Warning Voltage @ load < 20% @ load ≥ 20%	22.0Vdc 21.4Vdc	46.0Vdc 44.0Vdc
Low DC Warning Return Voltage @ load < 20% @ load ≥ 20%	23.0Vdc 22.4Vdc	47.0Vdc 46.0Vdc
Low DC Cut-off Voltage @ load < 20% @ load ≥ 20%	21.0Vdc 20.0Vdc	42.0Vdc 40.0Vdc
High DC Recovery Voltage	31.0Vdc	54Vdc
High DC Cut-off Voltage	32.0Vdc	60Vdc
THDV	<3% for linear load, <5% for non-linear load @ nominal voltage	
DC Offset	≤100mV	

Table 3 Charge Mode Specifications

Utility Charging Mode						
INVERTER MODEL	2000 Spirit 2K	2001 Spirit Plus 2K	3000 Spirit 3K	3001 Spirit Plus 3K	5000 Spirit 5K	5001 Spirit Plus 5K
Charging Algorithm	3-Step					
AC Charging Current (Max) (@Vi/p=230Vac)	10/25Amp			15/35Amp		
Bulk Charging Voltage	Flooded Battery	29.2Vdc			58.4Vdc	
	AGM / Gel Battery	28.2Vdc			56.4Vdc	
Floating Charging Voltage	27.4Vdc			54.8Vdc		

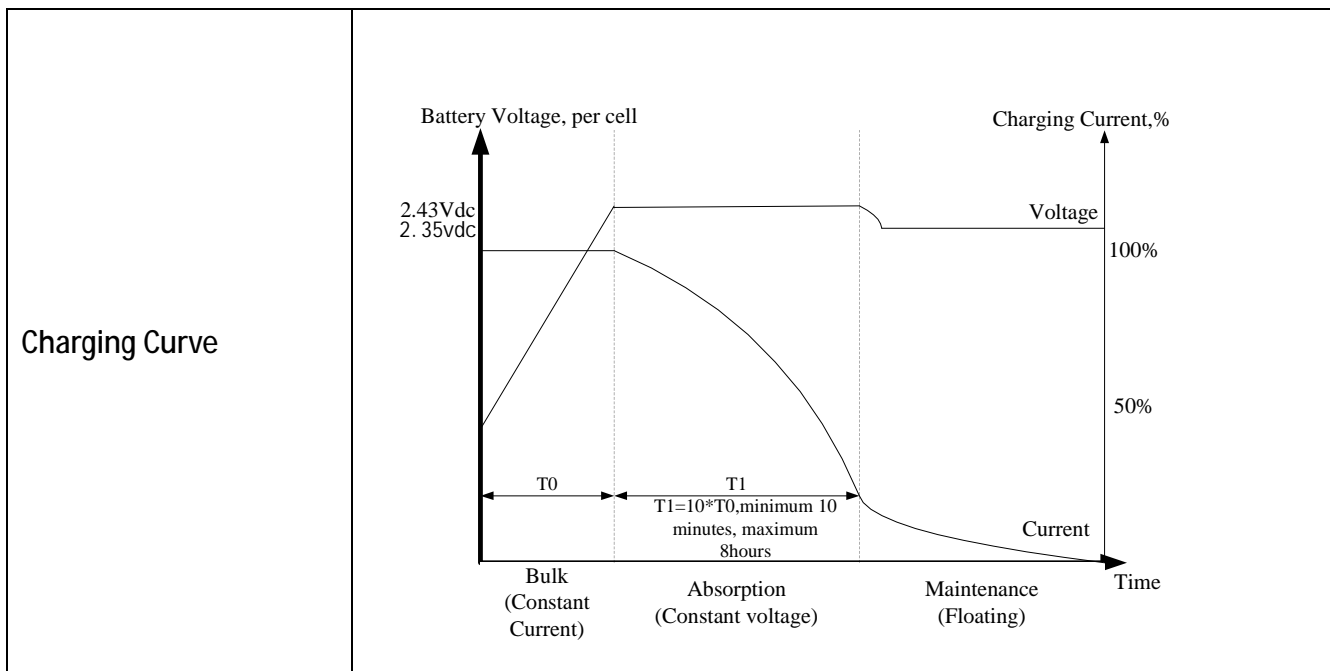

MPPT Solar Charging Mode

INVERTER MODEL	2000 Spirit 2K	3000 Spirit 3K	5000 Spirit 5K	2001 Spirit Plus 2K	3001 Spirit Plus 3K	5001 Spirit Plus 5K
Maximum PV Array Power	N/A			1000W		4000W
Charging Current	N/A			40Amp		80Amp
PV Array MPPT Voltage Range	N/A			30Vdc ~ 75Vdc		60 ~ 150Vdc
Max. PV Array Open Circuit Voltage	N/A			100Vdc		150Vdc
Max Charging Current (AC charger plus solar charger)	25Amp		35 Amp	65Amp		115 Amp

Table 4 General Specifications

INVERTER MODEL	2000 Spirit 2K	2001 Spirit Plus 2K	3000 Spirit 3K	3001 Spirit Plus 3K	5000 Spirit 5K	5001 Spirit Plus 5K
Safety Certification	CE					
Operating Temperature Range	-10°C ~ 50°C					
Storage temperature	-15°C ~ 60°C					
Dimension (D*W*H)/ mm	126*300*360				130*330*486	
Net Weight ,kg	6.8	7.2	7.2	7.8	10.2	11.4

Troubleshooting

Problem	Possible Causes	Remedy
No LCD display	1. Battery weak	1. Re-charge battery
	2. Battery defective (can't be charged)	2. Battery replacement
	3. Power switch is not pressed	3. Press and hold power switch
	4. Battery polarity reversed, can't start up the unit	4. Contact dealer or supplier for service
Mains normal but works in inverter mode	1. AC Input is missing	1. Check AC input connection
	2. Input fuse broke	2. Replace the input fuse
PV input normal but works in inverter mode	1. PV weak	1. Check PV power or reduce loading
	2. PV input is missing	2. Check PV input connection
Alarm buzzer beeps continuously	1. Overload (fault code: F2)	1. Reduce loading so the loads' capacity is no larger than the upper limit
	2. Output short-circuited (fault code: F3)	2. Check wiring or remove abnormal load
	3. Inverter over-temperature (fault code: F5)	3. Check the ventilation at installed location and make sure the air vent of inverter is clear
	4. Over charging (fault code: F1)	4. Restart the unit, If the fault persists, contact dealer or supplier for service.
	5. Fan error (fault code: F4)	5. Check if the fan is blocked by obstacle. if not, contact dealer or supplier for service
	6. DC voltage is under low DC shut-down point (fault code: F0)	6. Make sure mains is normal to recharger the battery
	7. Output abnormal (fault code: F6)	7. Contact dealer or supplier for service
	8. Back-EMF (fault code: F7)	8. Check the AC Input and output wire connection
	9. SCC output over current (fault code: F11/F21/F31)	9. Check wiring or remove abnormal load
	10. SCC over temp (fault code: F12/F22/F32)	10. Check the ventilation at installed location and make sure the air vent of inverter is clear
	11. SCC Output over voltage (fault code: F13/F23/F33)	11. Restart the unit. If the fault persists, contact dealer or supplier for service
	12. SCC PV input over voltage	12. Check PV input voltage. If the

	(fault code: F14/F24/F34)	voltage is normal, contact dealer or supplier for service
Back up time is shortened	1. Overload	1. Reduce the loading
	2. Battery voltage is too low	2. Charge battery for 8 hours or more
	3. Battery bank is too small	3. Increase battery bank capacity

Note: If the unit fails to operate properly after installation and the setup has been re-examined thoroughly, use the troubleshooting table to determine the probable cause and remedy. For unlisted faults, please contact your local dealer or supplier for service assistances.